


## **Acoustic and Thermal Liner – Land Cruiser 80 series**


Excessive heat in the cabin is a well known problem especially around the transmission turret area

Heres how to cut that heat by 90-95% and considerably lower internal noise as a bonus.

Start with a total strip out ... toss the old factory underlay but keep the bitumous areas intact

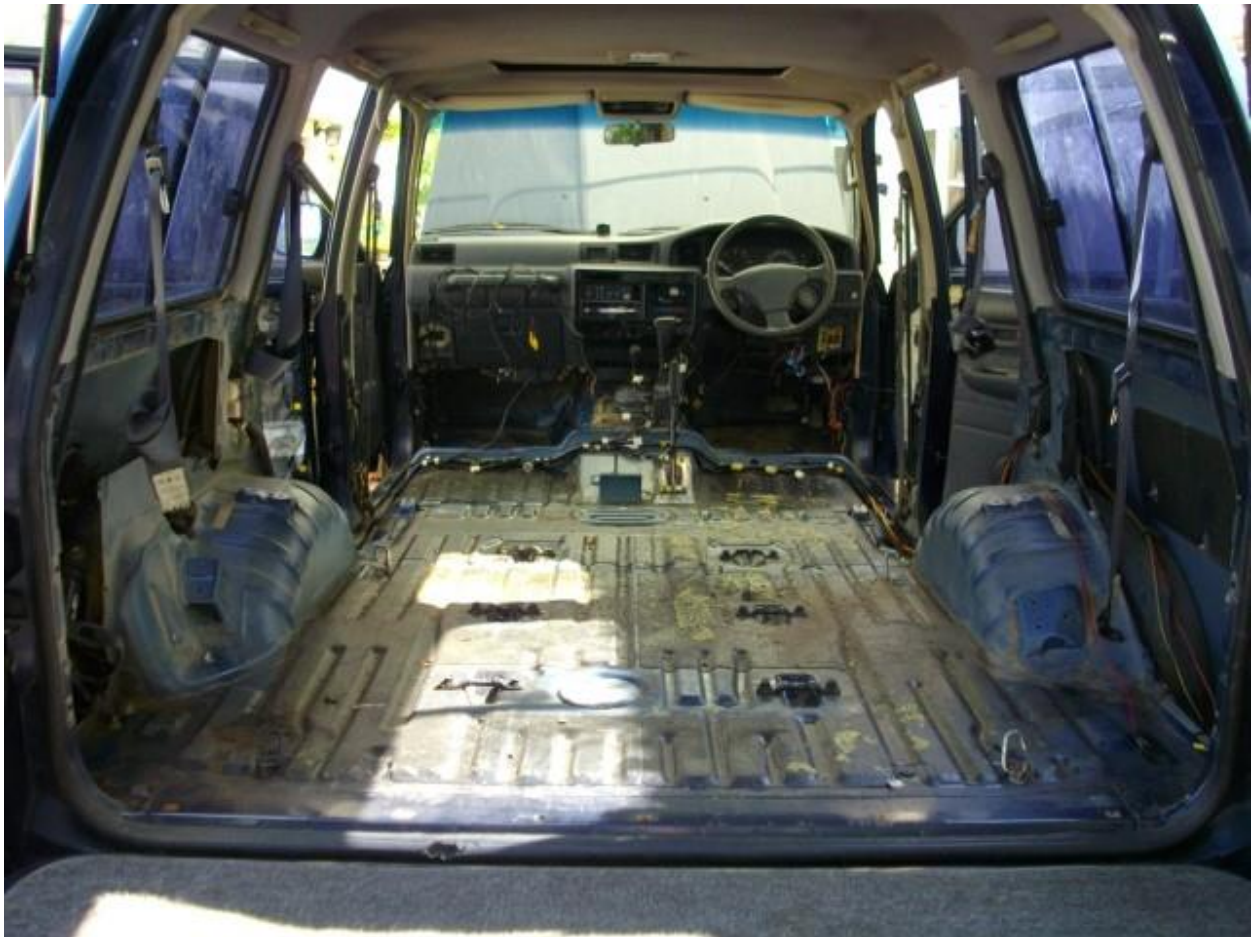

## Check out Ebay for this

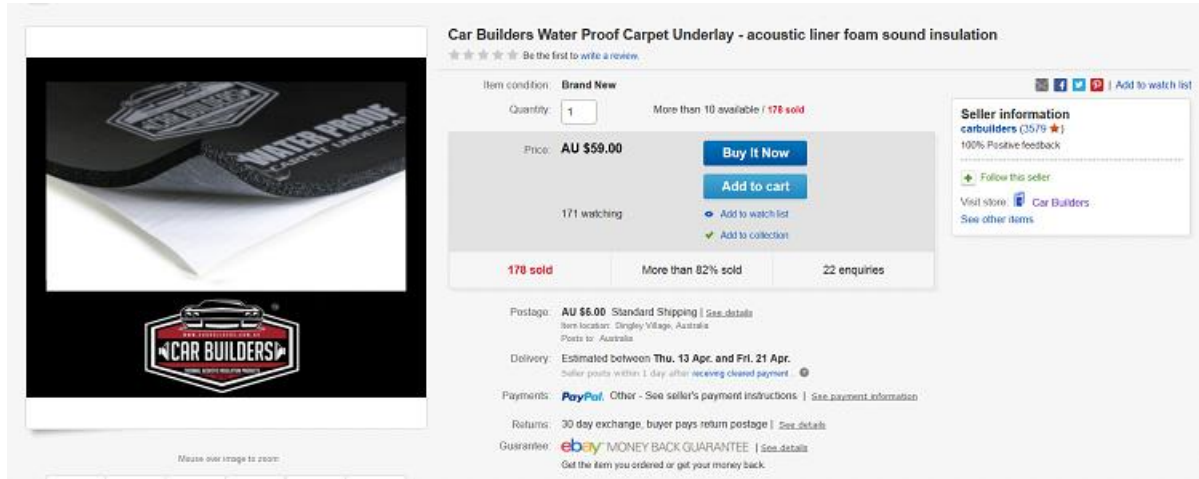

3 boxes will cover all the floor area + the rear wheel arches if you utilize the small offcuts wisely

Easy to cut , peel and stick. Don't forget to cut openings for such things as seat and seatbelt fixing points , rear seat attachment bars etc., as you go.



<http://www.carbuilders.com.au/>













